

ME100/500/600

ASSEMBLY INSTRUCTIONS:

A: Locate gas lift into five star base/castors.

B: Locate seat assembly onto gas lift
i.e. top of gas lift into circular hole in centre of under-seat mechanism.

C: Locate back assembly into the aperture at the rear of the seat and push firmly into place.

Please take care when lifting the chair as it is heavy when assembled and may need two people.



OPERATING INSTRUCTIONS:

1: Seat Height Adjustment: Raise lever (1) to raise or lower height of seat.

2: Seat/Back Angle Adjustment: Raise lever (2) to set seat and back angle, push down to lock into desired position.

3: Back Angle Adjustment: Raise lever (3) to set independent back angle, push down to lock into desired position.

4: Body Weight Tension Adjustment: Wind hand-wheel (4) clockwise to loosen and anti-clockwise to tighten.

5: Seat Slide: Raise lever (5a) to alter seat depth by sliding body forward, push down to lock into desired position. Rotate telescopic handle (5b) to alter seat depth by sliding body forward, release to lock into desired position.

6: Back Height Adjustment: In seated position, raise backrest (6) manually to desired position. Ratchet mechanism will lock into several height positions. When ratchet reaches top, it will release back to the lowest position.

7: Inflatable Lumbar: (If applicable) The hand pump (7) at the rear of the seat will inflate the lumbar when squeezed. Depressing the valve will deflate the lumbar.

8: Adjustable Lumbar Panel: (ME500) In seated position, raise lumbar panel manually to desired position